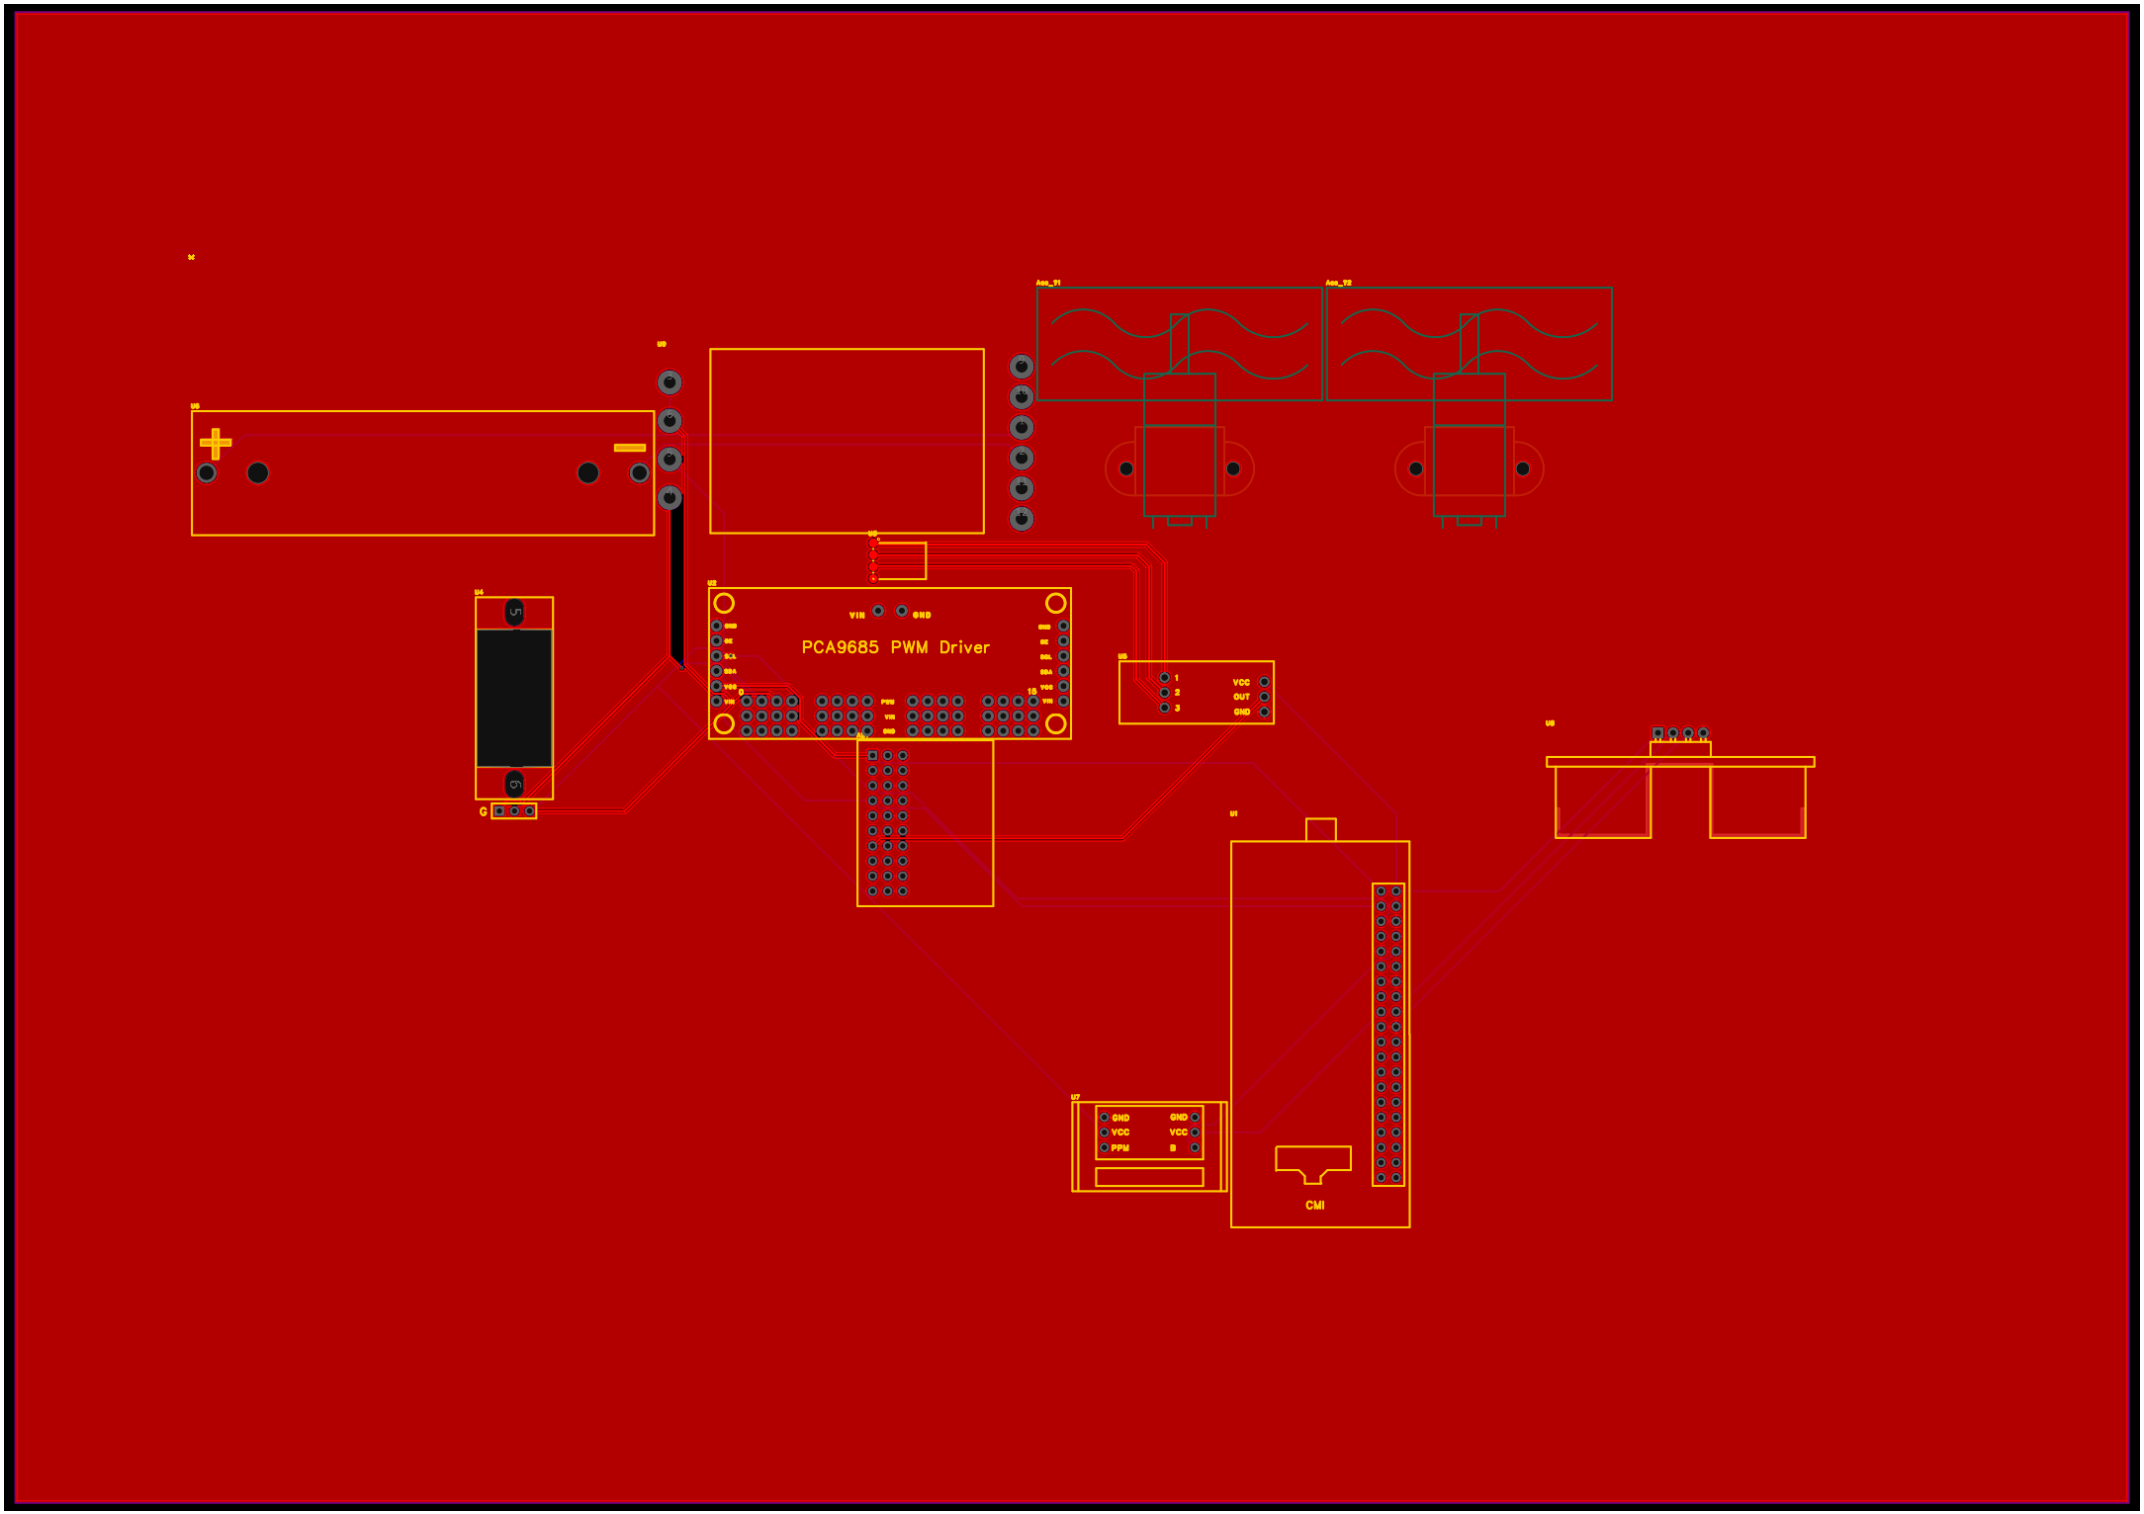
Axis_Y1
Axis_Y2
PCA9685 PWM Driver
VIN
GND
VCC
OUT
GND
CMI